

Parts List

- 1 Ball valve
- 3 Double check valve with integral isolation valve.
- 2 Flexible braided hose.
- 4 Blanking cap & strap

Installation Instructions

The filling loops MUST be installed in accordance with the requirements of the Water Regulations Guide - 1999, Schedule 2, Section 8, Paragraph 24.

- 1 The filling loop must be installed in close proximity to the boiler
- 2 The double check valve (3) MUST be connected to the mains cold water supply pipe in an accessible location.
- 3 The isolating valve (1) MUST be connected to the boiler central heating return pipe in an accessible location.
- 4 Ensure that the distance between (1) and (3) does not exceed the length of the flexible hose (2).
- 5 Ensure the direction arrow on the side of the double check valve (3) follows the direction of flow.
- 6 Connect the flexible hose (2) between valves (1) and (3).

Filling the System

- 1 Ensure all joints are water tight.
- 2 Follow the instructions supplied with the boiler filling the heating system, open valves (1) and (3).
- 3 Care should be taken not to over pressurise the heating system. As the pressure begins to rise the ball valve (1) should be used as a regulator to control the rate of pressure increase until the specified pressure has been achieved.
- 4 Once filling and pressurisation have been completed, close the valves (1) and (3) and REMOVE the FLEXIBLE HOSE (2) and fit the blanking caps (4).

In this procedure document we have endeavoured to make the information as accurate as possible.

We cannot accept any responsibility should it be found that in any respect the information is inaccurate or incomplete or becomes so as a result of further developments or otherwise.

E & O.E

Altecnic Ltd Mustang Drive, Stafford, Staffordshire ST16 1GW

T: +44 (0)1785 218200 E: sales@altecnic.co.uk

Registered in England No: 2095101

altecnic.co.uk

altecnic