
## Insulation Shell for temperature and pressure relief valve

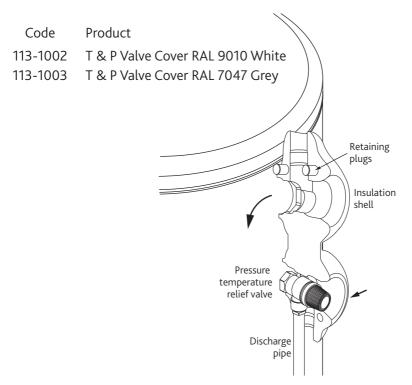

- The insulation shell is suitable for pressure temperature relief valves fitted to the top or the side of an unvented hot water vessel.
- Only fit the insulation shell to the valve when the vessel is cold to avoid burns or injury.
- Ensure the correct size of shell is fitted to the valve.
- Fit the 2 plugs into the holes in one half of the shell.
- Local half the shell onto the valve, bend the shell through 180° until the plugs can locate into the 2 holes and press the two halves firmly together.

## E & O.E



